

Adjust-A-Wings

"INSTRUCTIONS"


ADJUST-A-WINGS® REFLECTORS ARE SCIENTIFICALLY DESIGNED FOR THE ADVANCED GROWER. DEVELOPED OVER MANY YEARS BY EXPERTS IN THE HORTICULTURAL INDUSTRY.

ADJUST-A-WINGS® REFLECTORS COME IN 3 UNIQUE FINISHES, "**AVENGER**" 97 % REFLECTIVE GLASS COATED SUPER ALLOY, "**DEFENDER**" TITANIUM WHITE HEAT RESISTANT POWDER COATED ALUMINIUM, "**ENFORCER**" COST EFFECTIVE HIGH QUALITY REFLECTIVE ANODISED ALUMINIUM.

STEP 1

REMOVE CONTENTS
CHECK AGAINST THE LIST BELOW

- 2 X REFLECTOR WINGS
- 2 X ADJUSTMENT WIRES
- 2 X HANGING HOOKS & THUMB SCREWS
- 1 X LAMP HOLDER

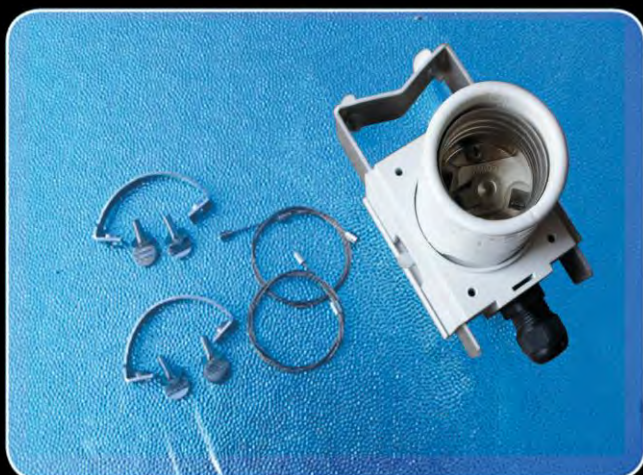

LAMP HOLDERS ARE PACKAGED AND SOLD SEPERATELY.
2 LAMP HOLDERS CAN BE USED WITH LARGE
ADJUST-A-WINGS REFLECTORS

STEP 2

REMOVE THE PLASTIC COATING FROM BOTH WINGS.



STEP 3


CONNECT BOTH WING SHEETS TOGETHER BY ALIGNING
BUTTON RIVETS WITH KEYHOLE SLOTS AND THE
WINGS WILL SIMPLY LOCK TOGETHER.

**NOTE: DO NOT ATTACH ADJUSTMENT WIRES
BEFORE PROCEEDING TO STEP 4.***



STEP 4

ATTACH THE HANGING HOOKS TO BOTH ENDS OF THE
ADJUST-A-WINGS USING THE THUMB SCREWS PROVIDED.

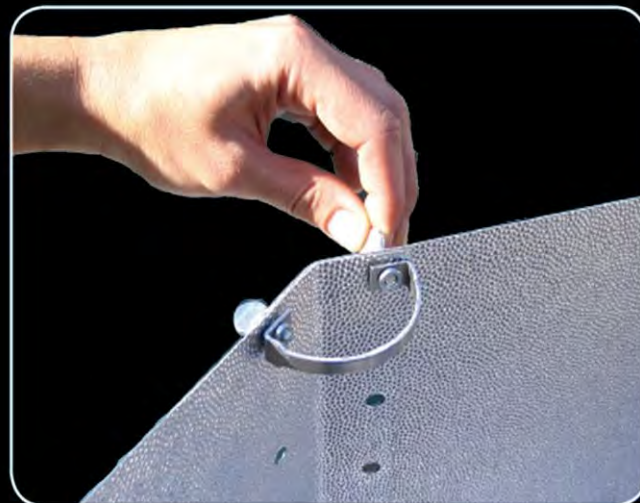

STEP 5


SELECT ONE ADJUSTMENT WIRE. TAKE THE END WITH THE SINGLE STOPPER AND THREAD IT THROUGH THE FIRST KEYHOLE. THEN THREAD IT BACK THROUGH ONE OF THE OTHER KEYHOLES, AS SHOWN BELOW.

THIS PRESETS YOUR REFLECTORS WIDTH.




STEP 6 IMPORTANT !!!

WHILE HOLDING THE OPPOSITE END OF THE ADJUSTMENT WIRE (THAT HAS 2 STOPPERS) CAREFULLY BEND THE WINGS BACK AWAY FROM THEIR SPINE AND LOCK THE END STOPPER INTO THE SINGLE KEYHOLE PROVIDED. REPEAT STEPS 5 & 6 AT THE OPPOSITE END OF THE WINGS TO ATTACH THE 2ND ADJUSTMENT WIRE.

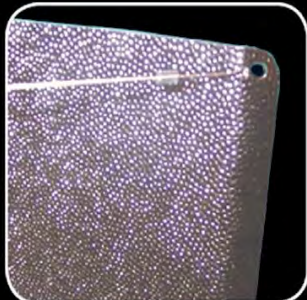

NOTE: THE 2ND STOPPER ON EACH ADJUSTMENT WIRE IS FOR GRIP ONLY IN THESE PROCEDURES

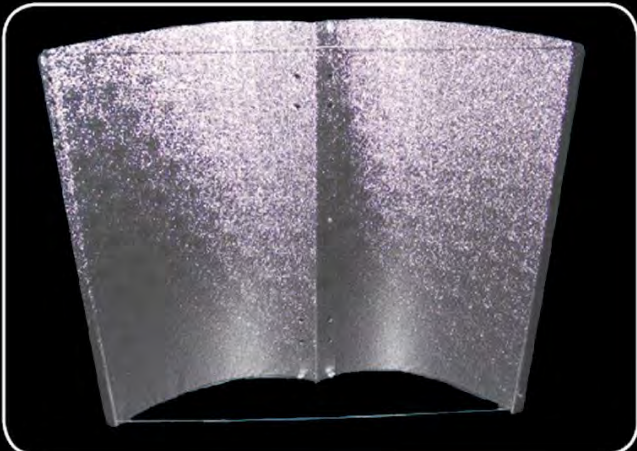

YOUR ADJUST-A-WINGS NOW LOOK LIKE THIS.

STEP 7



ADJUST-A-WINGS SETTINGS ARE CHANGED BY REVERSING STEP 6 AND CHOOSING A DIFFERENT KEYHOLE POSITION FROM STEP 5

NOTE: ADJUST ONE END OF THE WIRES AT A TIME

WARNING:
FOR SAFE OPERATION, ENSURE THAT THE POWER IS OFF BEFORE ADJUSTING THE WINGS OR LAMPHOLDER.

STEP 8

TAKE THE LAMPHOLDER AND USING THE 2 THUMB SCREWS PROVIDED ATTACH AS SHOWN BELOW

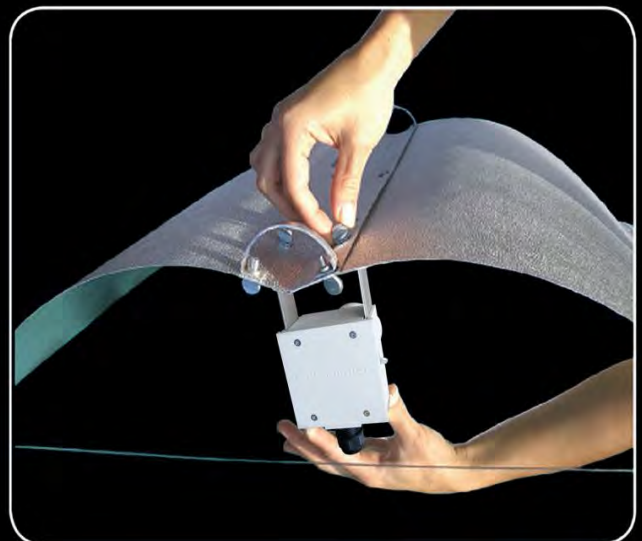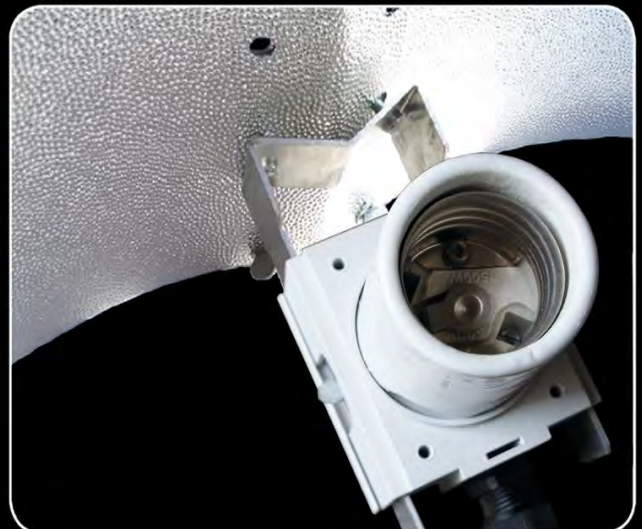

WIDE SETTINGS PRODUCE BROAD EVEN LIGHT PATTERNS FOR MAXIMUM AREA COVERAGE AND DEEP FOILAGE PENETRATION.
NARROW SETTINGS PRODUCE UNIFORM CONCENTRATED LIGHT PATTERNS FOR USE AT GREATER DISTANCES ABOVE PLANTS.
VERTICAL ADJUSTMENTS TO THE LAMPHOLDER PROVIDE A METHOD FOR FINE FOCUS CORRECTION.

